

Automatic Leveling System

The system consists in four hydraulic jacks, hydraulic power and a computerized Controller unit.

When activated, the system automatically actuates the jacks to level the vehicle. The correct leveling is important for antenna positioning and alignment, telescoping mast operation and air conditioning use.

For heavy vehicles, the jack is always in vertical. In smaller vehicles, the jack is retracted to the horizontal position for traffic of the vehicle.

For correct dimensioning and specification of the leveling system, vehicle specifications are necessary.



Automatic Leveling System: Part # 15427



See more at:  
[www.hwhcorp.com](http://www.hwhcorp.com)

RF COM is an HWH  
authorized service center



Hydraulic Pump

